

Contents:

Backsaver Cranes	2
Safety Information	4
Backsaver Cranes – Options available	5
300kg Backsaver Crane Spare Parts List Exploded View	6 7 7
500kg Backsaver Crane Spare Parts List Exploded View	9
Backsaver Crane Assembly / Operating Bolt-down Specs Component Weights Vehicular Installation	10 10 10 11
8000 series Brake Winch Specifications Attaching Handle Spare Parts Listing Front and Side Elevation, Bolt Down Specifications	12 13 14 14

Please note that all goods are supplied by Advansa Pty Ltd to the Purchaser for use only in applications and purposes for which they were originally designed. Advansa Pty Ltd is not liable for any consequential loss whatsoever from improper or inappropriate use of the goods supplied, where the goods are used for purposes beyond or outside of the scope of application for which they were designed and which exceeds their designed performance limit. At all times please consult Advansa Pty Ltd if unsure of the suitability of the goods for your intended application.

Jarrett Winches and Cranes - Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Advansa Pty Ltd Winch Warranty Policy: The Warranty is for the period of twelve months on Jarrett winches / cranes providing it is used for the purpose that it was designed for. Any repairs, alterations, modifications or misuse of the winches / cranes will void the warranty. Winches / cranes will be repaired under warranty providing proof of purchase is supplied. No credits or replacements will be issued except with approval from Advansa Pty Ltd.

Should you wish to make a claim under this guarantee, the product and proof of purchase must be returned pre-paid by you to the place of purchase.

The Company will liaise with Advansa Customer Service (Ph: 08 8243 9100) as to the appropriate action for remedy, detailing

- Consumer name, address and contact number
- Product description, product code, serial number(s) and warranty issue

Where appropriate, the Customer Service Department will advise the Company of the method to return the product to Advansa. The freight cost from Advansa's customer to Advansa will be at Advansa's expense. On receipt of the defective product, either the repaired product or a replacement product will then be delivered to the Company at Advansa's expense.

All other related expenses will not be borne by Advansa.

The benefits to the consumer given by the warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods to which the warranty relates.

Backsaver Cranes Save Your Back Save Your Money

Backsaver Crane - Mark II with Extendable Boom (300kg & 500kg)







There is an easier way

Don't take the risk to your back, equipment or business. If it's got to be lifted, do it the easy way, with a Jarrett Backsaver Crane. The Jarrett Backsaver Crane has the capacity to safely, simply and effectively lift and place loads of up to 300kg and 500kg.

300kg and 500kg Capacity Lift

The lifting capabilities of the Backsaver Crane are supplied by a 300kg and 500kg manual brake winch. To raise the load simply wind the handle, to lower the load wind the handle in the reverse direction. The winch incorporates a load friction brake which is automatically activated when the handle is released - keeping the load safely in position at all times.

Now available with 12 and 24 volt DC Electric Winches

The Jarrett Backsaver Crane is the economical alternative to expensive vehicle mounted hydraulic cranes and is suitable for utilities, trucks and trailers, etc. The Crane is also suitable for industrial, marine and rural applications.

Various coatings available – see page 5

Standard Jarrett colours, Galvanised or Powder coated White



F19001CW 500kg **Powder coated White**



The Jarrett Backsaver Crane –

The Backsaver Crane provides the perfect lifting solution to tradesmen, farmers, delivery drivers and anyone who has to lift loads of anything from fuel drums, jet skis, small boats, motor bikes, car engines, ride-on-mowers, cement mixers, farm machinery, livestock, fence, brick cutters and even tractor tyres - the possibilities are endless. In fact if you have ever thought, "There's got to be a better way", chances are that Jarrett has already found it.









F12643 300kg



Important Safety Information

DO the following:

Read carefully and comply with the guidelines set forth in the Owner's Manual.

Keep hands away from the drum, gears, wire cable / fibre rope, and other moving parts of the equipment.

Install the wire cable / fibre rope securely to the winch drum.

Ensure at least 3 turns of wire cable / fibre rope wound on the drum at all times, to serve as an anchor wrap.

Keep all unnecessary personnel away from the winch while in operation.

Keep out of the path of the load should the wire cable break and snap back and cause injury.

DO NOT do the following:

Do not lift people, or objects over people. Do not walk or work under a load or in the line of force of any load.

Do not exceed the load rating of the winch or any other component in the system. To do so could result in failure of the equipment.

Do not use more than one winch to move a load that exceeds the load rating of a single winch. A shift in load weight could overload the equipment.

Do not use damaged or malfunctioning equipment. To do so could result in failure of the equipment.

Do not modify the equipment in any way. To do so could cause equipment failure.

Do not apply a load on the winch with the wire cable / fibre rope fully extended. Keep at least three full turns of cable / fibre rope on the drum.

Do not wrap the wire cable / fibre rope around the load. This may damage the wire cable / fibre rope and could cause the load to slip / fall. Use a sling or other approved lifting device.

Do not operate the winch with covers / guards removed or improperly installed.

Do not divert your attention from the operation. Stay alert to the possibility of accidents, and try to prevent them from happening.

Do not jerk or swing the load. Avoid shock loads by starting and stopping the load smoothly. Shock loads overload the equipment and may cause damage.

Do not leave a suspended load unattended unless specific precautions have been undertaken and keep people away from the winch and out from under the load.

Backsaver Cranes: - Options available

Backsaver Crane - Mark II with Extendable Boom (300kg) with F18230/5 Brake Winch

F12643	 Backsaver Crane 300kg with Cable (Powder coated green and gold)
F12643R	- Backsaver Crane 300kg with Fibre Rope (Powder coated green and gold)
F12643G	- Galvanised Backsaver Crane 300kg with Cable
F12643GR	- Galvanised Backsaver Crane 300kg with Fibre Rope
F12696E12	- Backsaver Crane 300kg with Electric Winch - Superwinch S5500 12V
F12696E24	- Backsaver Crane 300kg with Electric Winch - Superwinch S5500 24V
F13643W	- Powder coated white Backsaver Crane 300kg with Cable
F13643WR	- Powder coated white Backsaver Crane 300kg with Fibre Rope

Backsaver Crane - Mark II with Extendable Boom (500kg) with F18260/5 Brake Winch

F19001	 Backsaver Crane 500kg with Cable (Powder coated green and gold)
F19001R	 Backsaver Crane 500kg with Fibre Rope (Powder coated green and gold)
F19001E12	- Backsaver Crane 500kg with Electric Winch - Superwinch S5500 12V
F19001E24	- Backsaver Crane 500kg with Electric Winch - Superwinch S5500 24V
F19001CW	- Dacrotised and powder coated white Backsaver Crane 500kg with Cable
F19001CWR	- Dacrotised and powder coated white Backsaver Crane 500kg with Fibre Rope



F12643 Backsaver Crane mounted on Holden Utility vehicle

Backsaver Crane - Mark II with Extendable Boom (300kg)

The Jarrett Backsaver Crane is fitted with 360° mechanical slewing by means of a worm drive gear. This eliminates the danger of the crane boom swinging out of control when the load is taken up. The boom can only be rotated (slewed) by operating the slewing control handle. This important safety feature keeps the load under control at all times – essential for one person operation.

With a choice of two models, the Backsaver Crane suits a host of reach and lift requirements. With an extendable position action, all cranes have a boom reach of over 1 metre at their 300kg and 500kg lift positions. Both models have a choice of boom angle settings for even greater adaptability.

If it's got to be lifted, do it the easy way, with a Jarrett Backsaver Crane.




F12643 - Backsaver Crane 300kg (Standard colours)

F12643G - Galvanised

F12696Exx - Electric Winch - Superwinch S5500

F13643W - Powder coated white




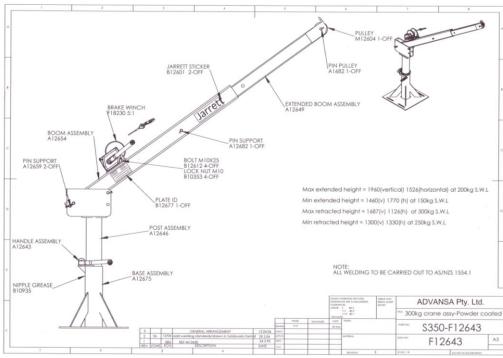


Jarrett Winches and Cranes are not designed for the movement of people

(T) +61 (0)8 8243 9100 (F) +61 (0)8 8243 9185 Toll Free Sales: 1 300 135 935 Email: sales@advansa.com.au Web: www.advansa.com.au

Spare parts listing for Backsaver Crane - 300kg

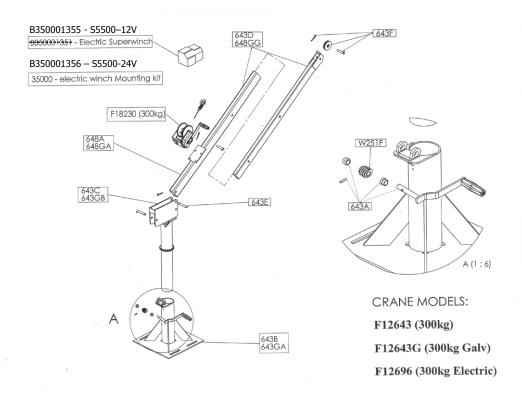

Exploded view of the F12643 (300kg) Backsaver Crane

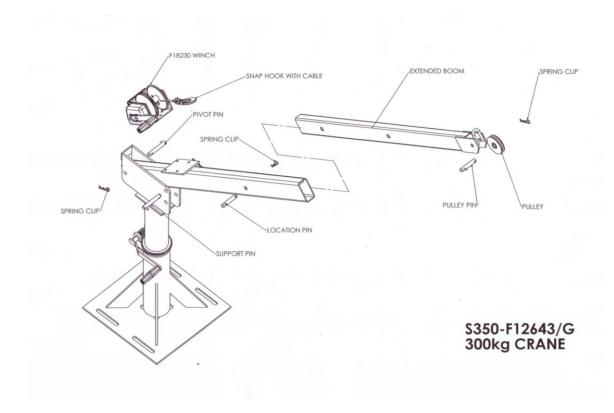

Backsaver Crane - Mark II with Extendable Boom (500kg)


The simple design of the Backsaver Crane means it is easy to assemble and can be fitted almost anywhere – to jetties, utes or tray tops and to a wide variety of fixed platforms. When a Backsaver Crane is vehicle mounted and the time comes to change vehicles, it is simple to remove and leaves only four holes. The Backsaver Crane is then ready to install elsewhere. The Backsaver Crane's simple operation means that little can go wrong and spare parts are available through Jarrett distributors around Australia.

The Backsaver Crane provides the perfect lifting solution to tradesmen, farmers, delivery drivers and anyone who has to lift loads of anything from fuel drums, jet skis, small boats, motor bikes, car engines, ride-on-mowers, cement mixers, farm machinery, livestock, fence, brick cutters and even tractor tyres – the possibilities are endless. In fact if you have ever thought, "There's got to be a better way", chances are that Jarrett has already found it.



Models (refer to page 5 for complete listing):


F19001 – Backsaver Crane 500kg (Standard colours) F19001Exx – Electric Winch - Superwinch S5500 F19001CW – Dacrotised and powder coated white

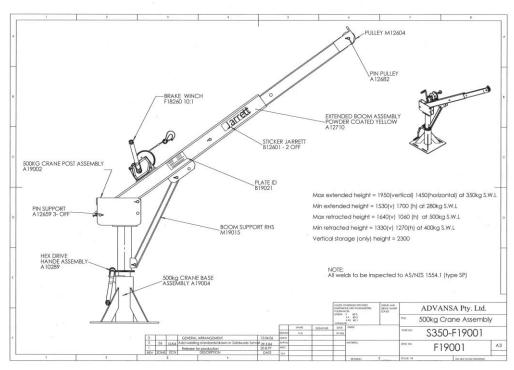


parrett winches and Cranes are not designed for the movement of people

(T) +61 (0)8 8243 9100 (F) +61 (0)8 8243 9185 Toll Free Sales: 1 300 135 935 Email: sales@advansa.com.au Web: www.advansa.com.au

Spare parts listing for Backsaver Crane - 500kg

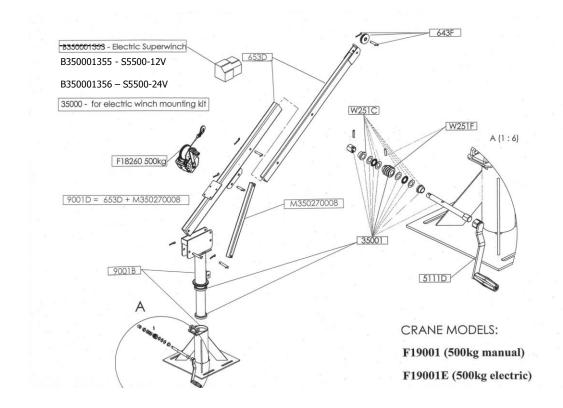

Exploded view of the F19001 (500kg) Backsaver Crane

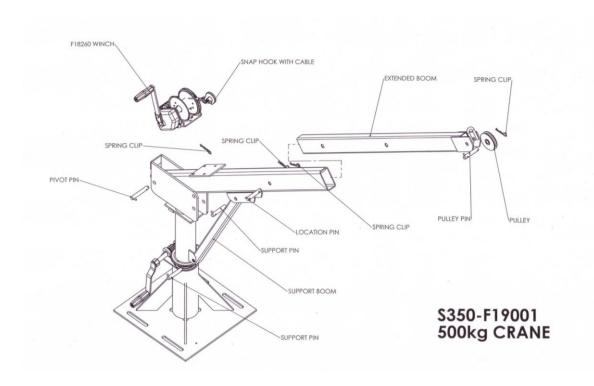

Backsaver Crane Assembly and Operating Instructions



- 1. Ensure the unit is correctly anchored via the base-plate to the operating platform.
- 2. Attach the boom to the post with the pivot pin and support pin.
- 3. Ensure the spring clips are fitted to the pivot pin and to the support pin.
- 4. Bolt the winch to the boom using 4ea M10 bolts, nuts and washers.
- 5. Thread the winch cable and hook it through the slot at the front of the boom.
- 6. Attach the pulley to the boom with the pulley pin and spring clips.

Please note: The Post and Base of the 500kg Backsaver Crane cannot be separated for installation

Operation

- 1. Ensure that the operating platform is steady. If the unit is vehicle mounted then it should be positioned on a stable and horizontal surface with neutral or park gear selected.
- 2. Release the hook from the base of the crane.
- 3. Rotate the boom by turning the slewing handle until the hook is positioned directly over the load. (NEVER ATTEMPT TO LIFT THE LOAD WITHOUT THE BOOM BEING POSITIONED DIRECTLY OVER THE LOAD)
- 4. Attach the hook securely to the load.
- 5. Standing clear of the load, raise the load by turning the winch handle clockwise.
- 6. When the load is at the desired height, slew the load to the required position.
- 7. Lower the load by turning the winch handle anticlockwise.
- 8. If the load has been lowered onto a vehicle tray then the load should be secured. (DO NOT TRAVEL WITH LOAD ATTACHED TO THE CRANE)
- 9. Secure the hook into one of the four braces and take up the slack in the cable to secure the boom.

Maintenance - Backsaver Crane


- 1. Clean and lubricate the following as required with appropriate grease:
 - Winch gears and pinion threads
- Slewing worm and handle
- All bushes

Pivot pin

Winch cable

- Base tube
- 2. Inspect the gears, bushes and cable monthly for wear and replace as required.

Backsaver Cranes - Bolt-down plate specs.

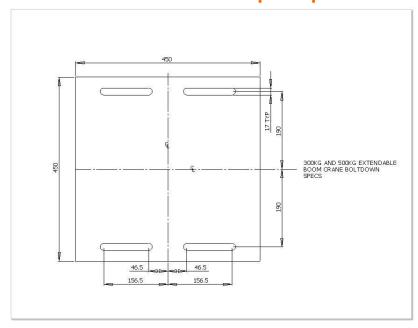

Miscellaneous Notes:

Vertical distance from top of U-plate to the underside of the safety hook (with the ferrule against the pulley) = 240mm

300kg & 500kg Backsaver Crane: When not in use – secure the book in

When not in use – secure the hook in one of the four braces.

500kg Backsaver Crane:

Crane Post and Base cannot be separated for installation.

Backsaver Cranes – Component weights (approx)

Winch – 7kg Inner and Outer Boom – 26kg Packed in cartons – pack of 2 Post and Base section – 40kg (300kg BSC) - 55kg (500kg BSC) Boom Support Bar (F19001 – 500kg series) – 3 kg Carton Dimensions: $172\text{cm} \times 48\text{cm} \times 62\text{cm}$


Vehicle installation of Backsaver Crane (300kg and 500kg)

To provide a minimum safety factor at the crane's maximum capacity (jib in short position), the general mounting arrangement (expected to provide good long term service) should consist of the following additional components (not supplied) and conditions:


- 2 ea. 100mm x 10mm x 450mm long steel plates drilled appropriately to suit crane base plate bolt pattern (see previous page).
- 2. 4 ea.M16 HH 8.8 bolts with ferrule spacers on each bolt to take up the bolt shank to mounting hole clearance with M16 nylocs.
- 3. Large above floor washers (M16) are used under the bolt heads.
- 4. The under floor plates must sit flat against the underside surface.

The Jarrett Backsaver Crane has a large mounting base that sits flat on the vehicle floor and is anchored to the floor with 2ea. 10mm flat under floor plates. Each plate is mounted under and across the full width of the main crane base (above the floor) and is not less than 100mm wide.

Due to the nature of mounting through corrugated floor structure it is recommended that regular inspection is undertaken to ensure that the mounting stay secure and no cracking of the floor become evident.

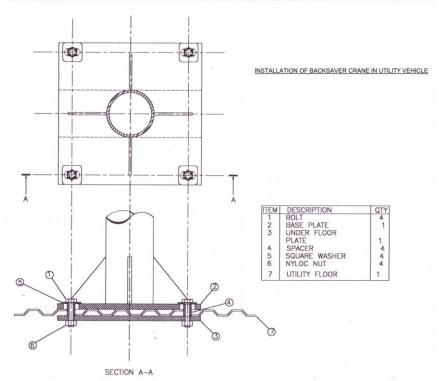



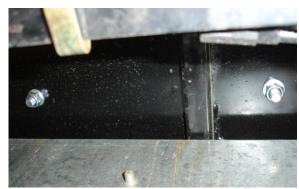

Mountings on vehicle tray top (L) & underside (Above)

8000 Series Brake Winch



E12643

5:1 / 10:1 ratio models (300-500kg) – available for Backsaver Cranes

E19001

Backsaver Crane	(300kg)	(500kg)
Winch Model:	(Coong)	(coong)
Cable	F18230	F18260
Fibre Rope	F18235	F18265
Gear Ratio	5:1	10:1
Application	Lifting	Lifting
Rated Capacity	300kg (2940N)	500kg (4900N)
Mass (Winch only)	6kg	6kg
Type of Brake	Self Actuating	Self Actuating
Drum Diameter Flange Diameter Drum Width Cable / Fibre Rope size Maximum Cable Capacity Maximum F/rope Capacity		50mm 130mm 52mm Ø6mm / Ø6mm 12m x Ø6mm 12m x Ø6mm
Max. Effort on handle at Rated Load	26kg	18kg
Cable Breaking Strain Fibre Rope Breaking Strain Cable (Galv) as supplied	1855kg 2050kg 7.5m x Ø5mm	2712kg 2050kg 7.5m x Ø6mm





Notes:

Features include:

Fastening Device

Fibre Rope as supplied

Backsayer Crane

Heavy duty 4mm winch body, Steel bushes, Self actuating brake mechanism, Fully enclosed brake, Spare parts available, Electroplated zinc cobalt, Powder coated finish, Detachable handle

7.5m x Ø6mm

Snap Hook

F18230 is used on 300kg Backsaver Crane – Product Code: F12643 **F18260** is used on 500kg Backsaver Crane – Product Code: F19001

7.5m x Ø6mm

Snap Hook

Recommended for lifting applications.

Note: Common user problem with this range of winches is the brake mechanism does not work when first assembled. When packaged, the winch and handle are separate and need to be assembled **as per the instructions included**. (see below and next page).

Handle Assembly:

The handle adaptor is turned clockwise until the ratchet is engaged **prior to** attaching the handle and securing with screw.

Self actuating brake requires a minimum of 18kg to operate safely.

Attaching handle to the 8000 Series Brake Winch





Note: Handle instructions (below) are included in packaging


ADVANSA PTY LTD©

CAUTION: ATTACH HANDLE TO WINCH USING EASY STEPS BELOW.

1:- TURN HANDLE ADAPTOR CLOCKWISE UNTIL RATCHET HAS ENGAGED.

2:- ATTACH THE HANDLE ONCE THE RATCHET HAS ENGAGED



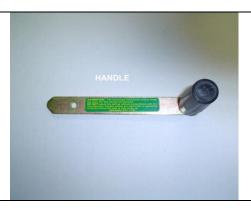


SHOULD ANY DIFFICULTIES BE ENCOUNTERED, PLEASE CONTACT OUR CUSTOMER SERVICE DEPARTMENT ON +61 8 8243 9100



8000 Series Brake Winches - Spare parts listing

F18210, F18220, **F18230**, **F18235**, F18240, **F18260**, **F18265**, F18280

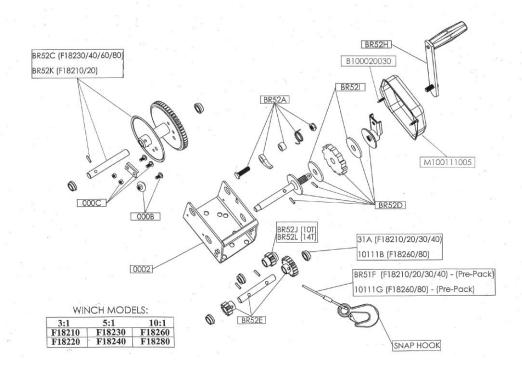

Front and side elevation, and bolt-down specifications / dimensions

